



REG	STATE	PROJECT	SHEET NO.

**NOTES:**

1. Unless otherwise shown, dimensions are in millimeters.
2. Set concrete cap in a 50 mm mortar bed.
3. Field measure the length and width of the caps to completely cover the existing inlets.
4. Cut the top of the existing inlets to a depth such that 150 mm remain above the highest existing culvert tying into the inlet.
5. Provide a 40 mm clearance to the outside face of all reinforcing bars.

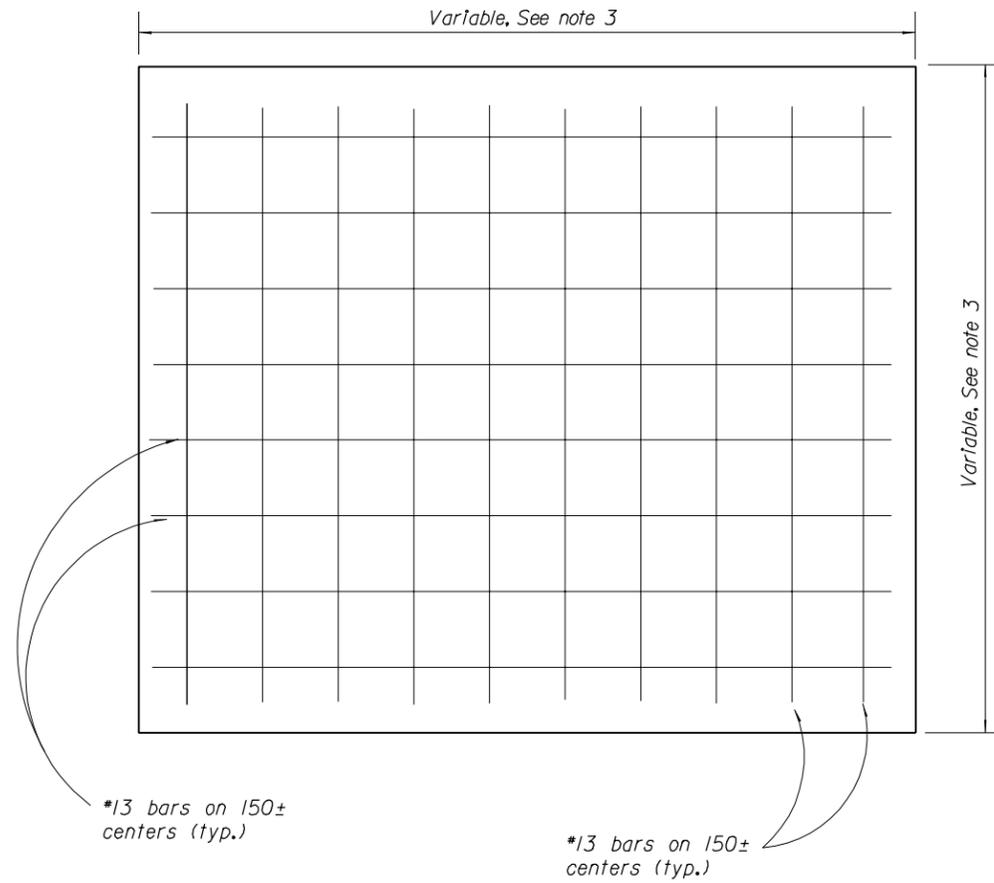

**PLAN**

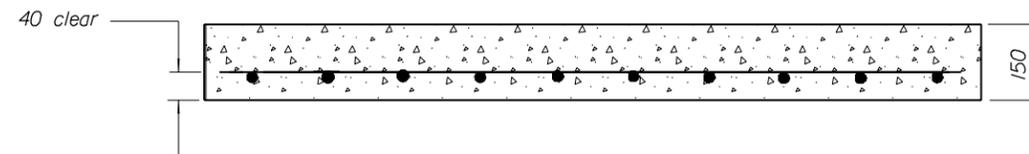

**SECTION**

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION EASTERN FEDERAL LANDS HIGHWAY DIVISION	
METRIC DETAIL	
PRECAST CONCRETE INLET CAP	
DETAIL APPROVED FOR USE --/----	DETAIL
REVISED: 07/98	EM604-8