

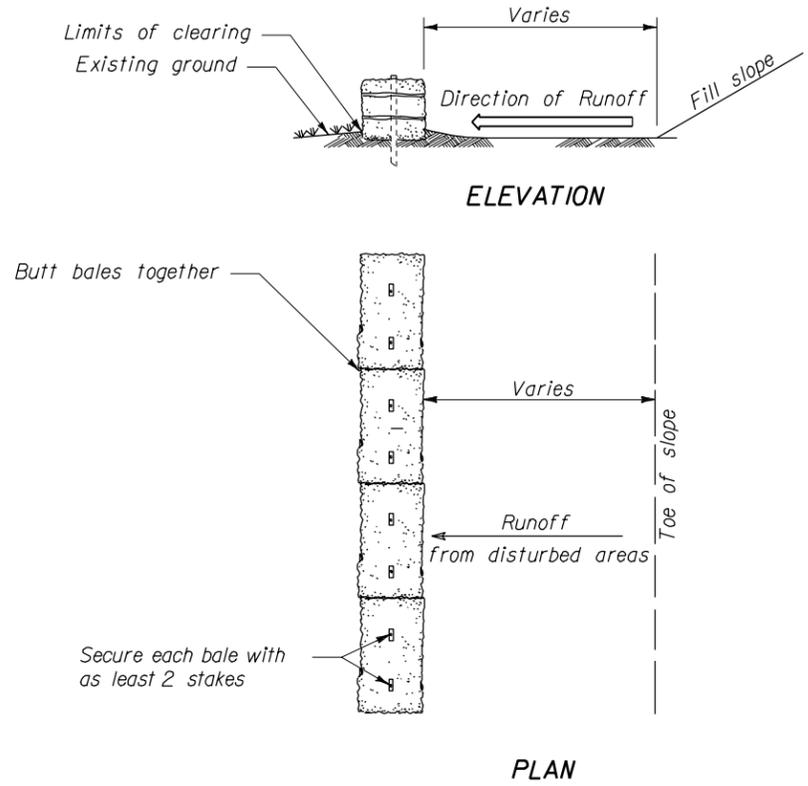


NOTES:

1. Unless otherwise shown, dimensions are in millimeters.
2. Use bales in drainage ditches only for low flow conditions and when specified on the Erosion Control Plans.

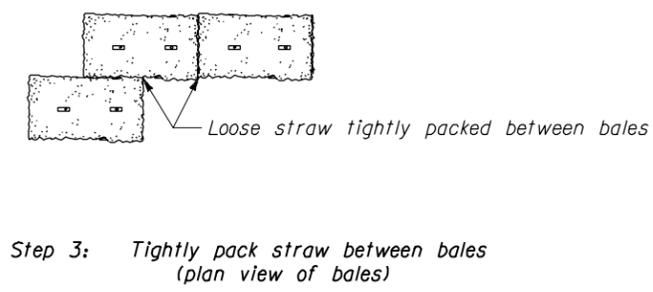



INSTALLATION OF A BALE BARRIER AT TOE OF FILL

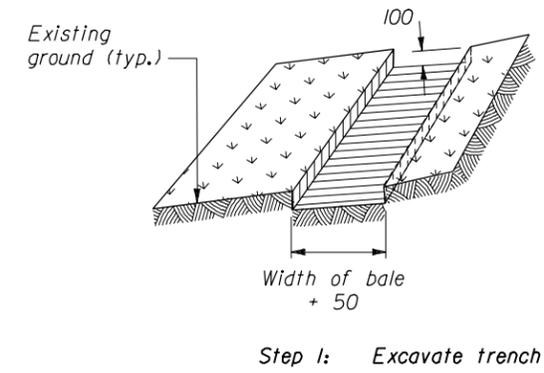



Secure each bale with at least 2 stakes. Angle the point of first stake towards the previously placed bale.

Install bales in trenches with ends of adjacent bales tightly abutting each other or overlapping

Orient bale so that string binding is placed horizontal

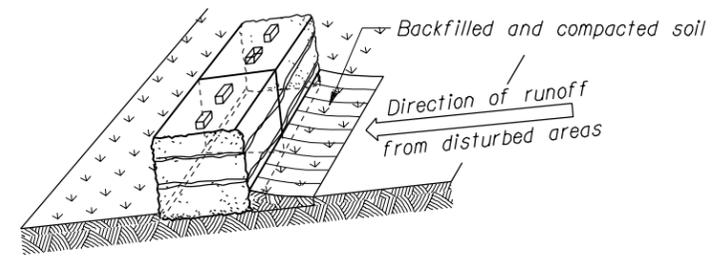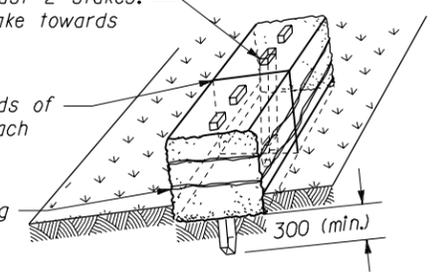

PROPERLY STAKED AND ENTRENCHED BALES

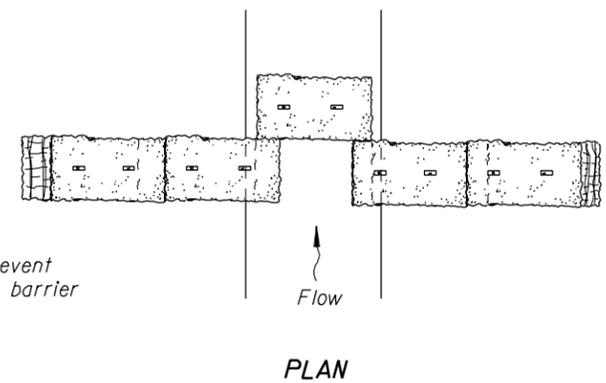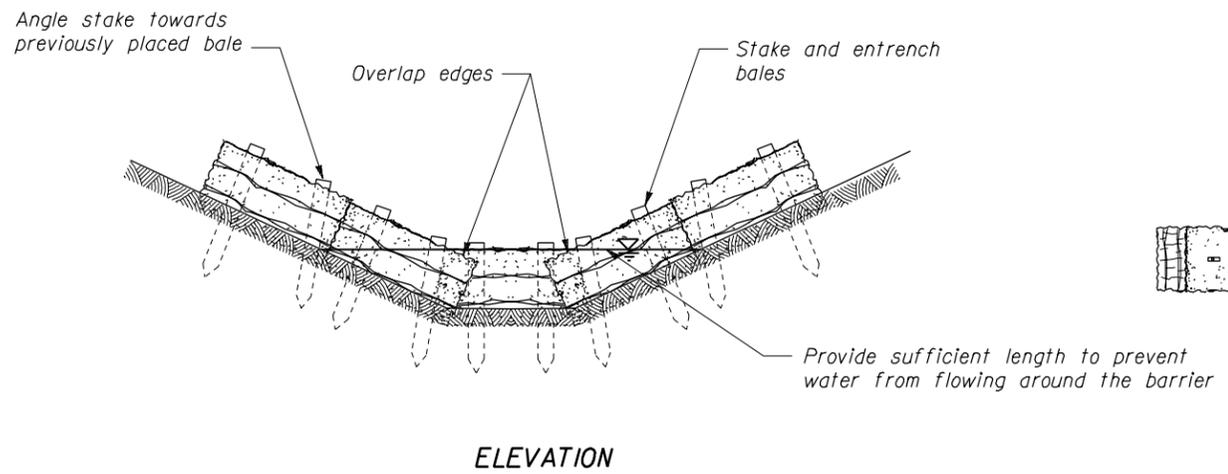

INSTALLATION OF A BALE BARRIER IN DITCH
(See note 2)

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION FEDERAL LANDS HIGHWAY	
METRIC STANDARD	
BALES	
STANDARD APPROVED FOR USE --/----	STANDARD
REVISED: 07/98	M157-03

NO SCALE