



REG	STATE	PROJECT	SHEET NO.

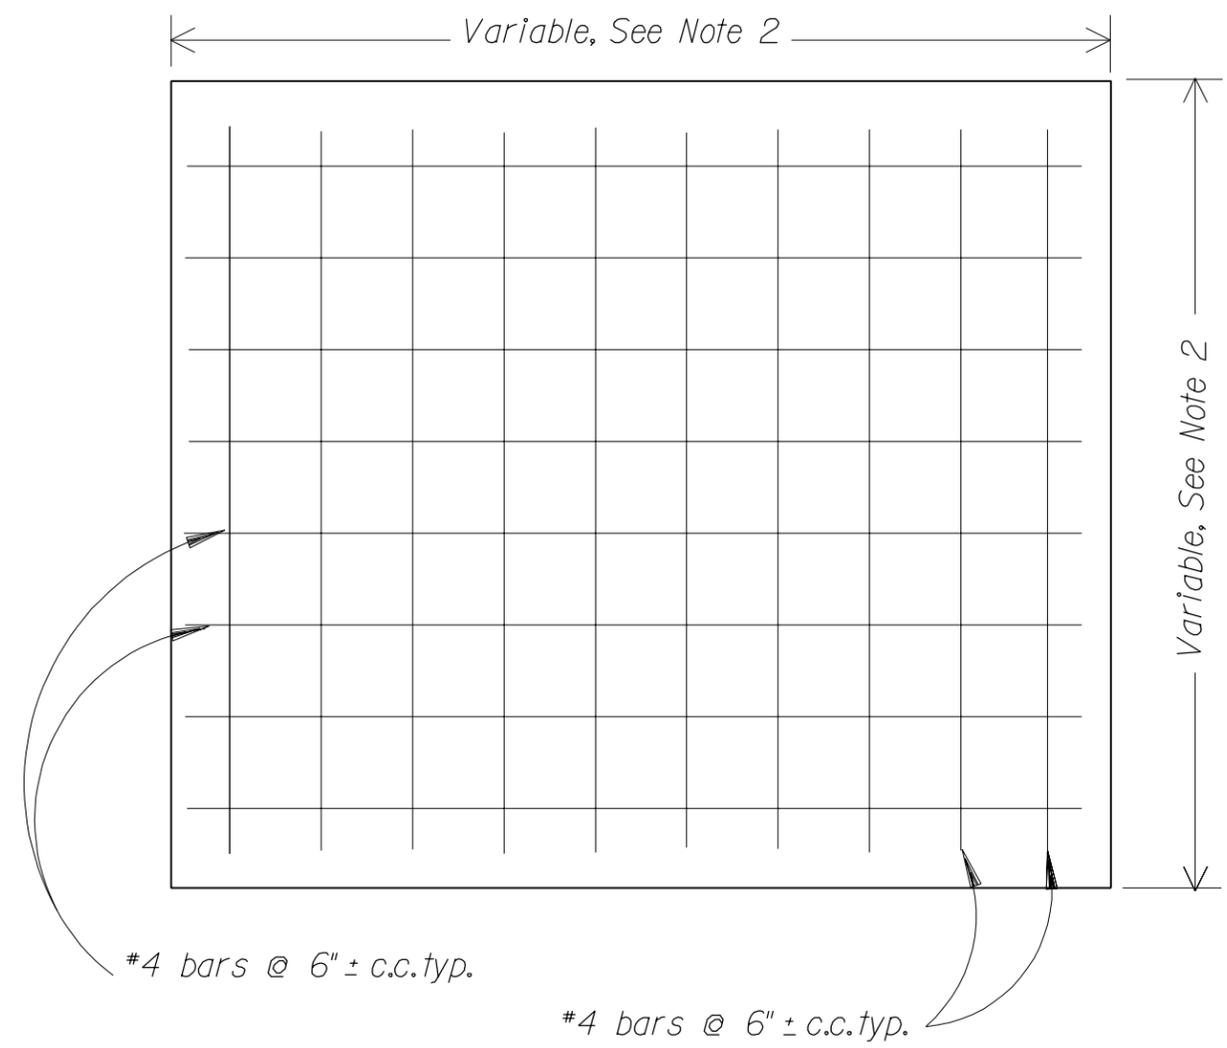

PLAN

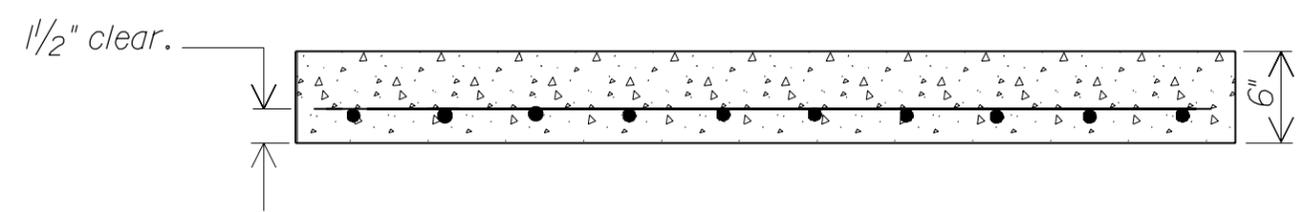

SECTION

NOTES:

1. Set concrete cap on a 2" mortar bed.
2. Field measure the length and width of the caps to completely cover the existing inlets.
3. Cut the top of the existing inlets to a depth such that 6 inches remain above the highest existing culvert tying into the inlet.
4. All reinforcing bars are to have a 1 1/2" clearance to the outside face.

02/26/2003 10:53:15 AM M:\Standard\English\1604\08.dgn

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION EASTERN FEDERAL LANDS HIGHWAY DIVISION	
DETAIL <b>PRECAST CONCRETE          INLET CAP</b>	
REVISIONS:	DETAIL APPROVED FOR USE ---/---/---
	DETAIL <b>E604-8</b>