



SECTION A-A

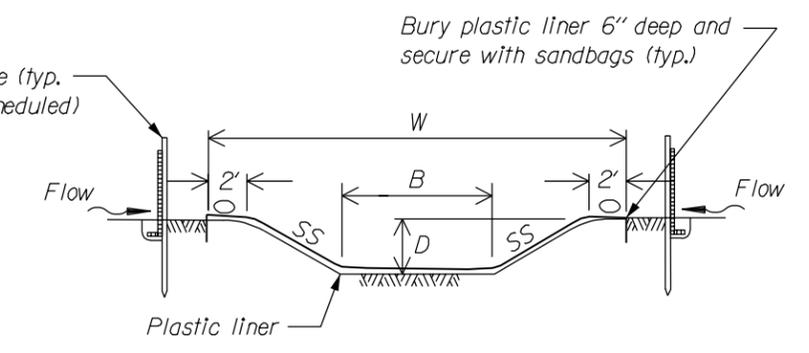


SECTION B-B

PLASTIC LINED DIVERSION CHANNEL

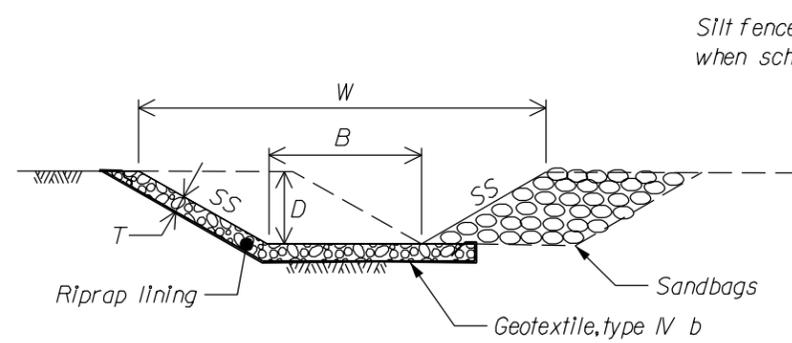

SECTION A-A

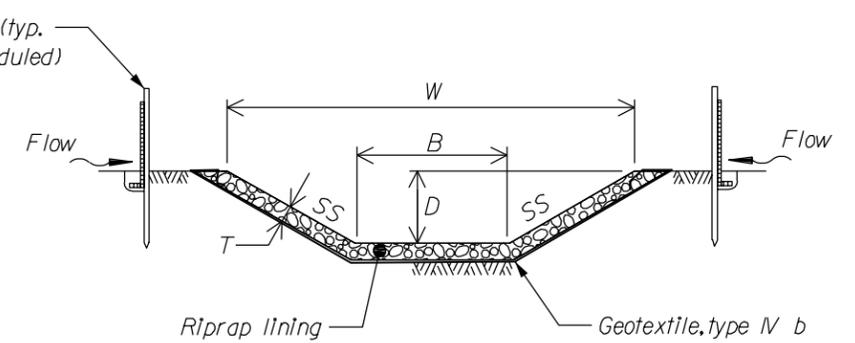

SECTION B-B

RIPRAP LINED DIVERSION CHANNEL

Notes:

1. See Erosion Control Schedule for riprap class, channel dimensions and quantities.
2. Use plastic liner or riprap along the entire length and width of the temporary diversion channel.
3. Construct channel at a minimum grade of 0.5 percent.
4. Do not construct with longitudinal joints if using a plastic liner. Bury the upstream edge of the liner a minimum of 6" deep and secure with riprap or sandbags.

(not to scale)

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION FEDERAL LANDS HIGHWAY	
STANDARD	
TEMPORARY DIVERSION CHANNELS	
STANDARD APPROVED FOR USE --/----	STANDARD
REVISED:	157-5