



REG	STATE	PROJECT	SHEET NO.

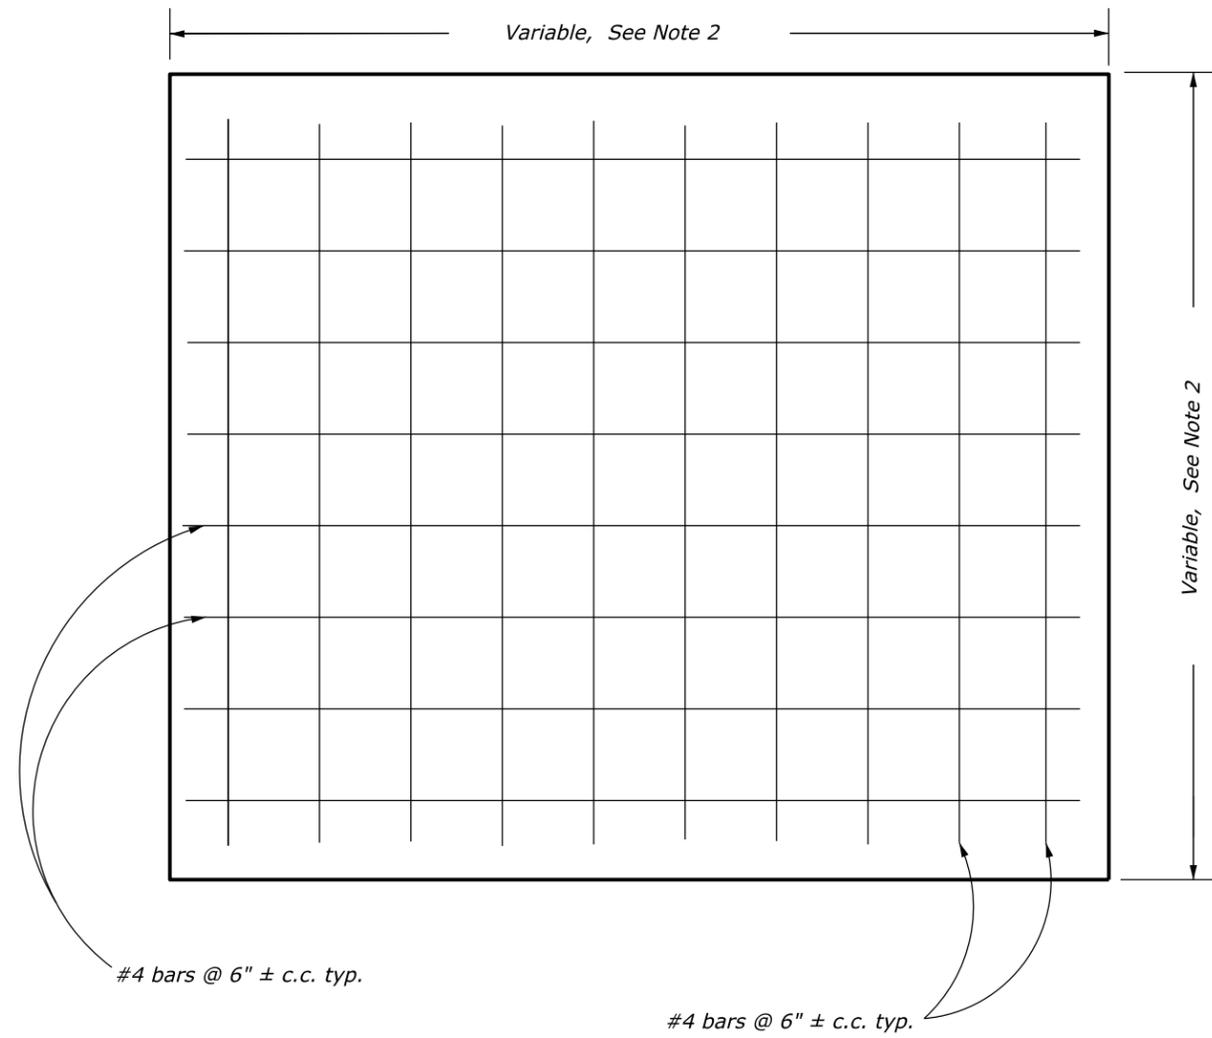

**PLAN**

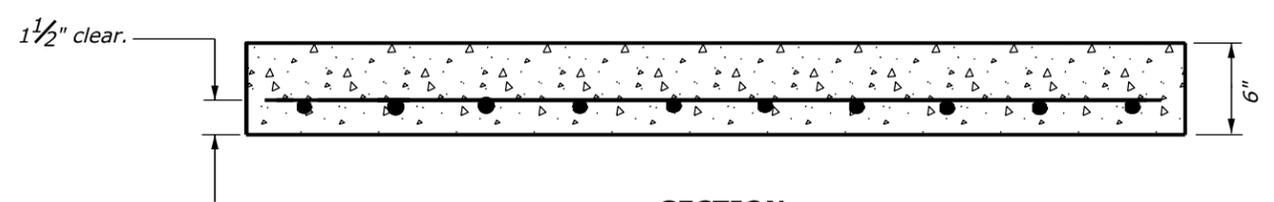

**SECTION**

**NOTES:**

1. Set concrete cap on a 2" mortar bed
2. Field measure the length and width of the caps to complete cover the existing inlets.
3. Cut the top of the existing inlets to a depth such that 6 inches remain above the highest existing culvert tying into the inlet.
4. All reinforcing bars are to have a 1 1/2" clearance to the outside face.

DATE TIME

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION EASTERN FEDERAL LANDS HIGHWAY DIVISION	
U.S. CUSTOMARY DETAIL	
<b>PRECAST CONCRETE INLET CAP</b>	
DETAIL APPROVED FOR USE APPROVED : MAY 2011	DETAIL E604-08