



Table of Contents

CHAPTER 15 ~ Digital Terrain Model (DTM)

Overview	15-1
Extracting Graphics	15-1
WORKFLOW 1: Extracting Graphics	15-1
<i>Figure 15-1: Accessing DTM Tools</i>	<i>15-2</i>
<i>Figure 15-2: DTM Tool Icon</i>	<i>15-2</i>
<i>Figure 15-3: DTM Tools Dialog</i>	<i>15-3</i>
<i>Figure 15-4: Extract Graphics</i>	<i>15-3</i>
<i>Figure 15-5: Append Setting</i>	<i>15-4</i>
<i>Figure 15-6: Build Triangles</i>	<i>15-4</i>
<i>Figure 15-7: Build Triangles</i>	<i>15-5</i>
Checking TIN	15-5
WORKFLOW 2: Checking the .tin	15-5
<i>Figure 15-8: DTM Menu</i>	<i>15-6</i>
<i>Figure 15-9: DTM Tool Bar</i>	<i>15-6</i>
<i>Figure 15-10: Accessing Triangle Statistics</i>	<i>15-7</i>
<i>Figure 15-11: TIN Statistics</i>	<i>15-7</i>
<i>Figure 15-12: Load DTM Feature</i>	<i>15-8</i>
<i>Figure 15-13: Load DTM Features</i>	<i>15-8</i>



Chapter 15: Digital Terrain Model (DTM)

Overview

An existing ground DTM will be the base with which to create existing profiles, existing cross-sections, generate earthwork, etc. Proper creation is imperative for the success of each of these procedures. This chapter will explain the process for extracting graphics from a DGN file containing 3D elements that represent existing ground.

Extracting Graphics

There will be occasions when a tin will need to be created from a 3D drawing. This can be done using the Extract Graphics command. The following paragraphs and workflows will describe the steps in creating and checking a tin.

This is a two-step process. The first step is to create a **.dat** file; the second step will use the **.dat** file to create the **.tin**. **Workflow 1** will describe these two processes.

Workflow 1: Extracting Graphics

- 1. Open the .dtm file that contains the 3 dimensional elements that will be used to create the tin.*
- 2. Access the DTM Menu by clicking on Applications>GEOPAK ROAD>DTM Tools as shown below:*

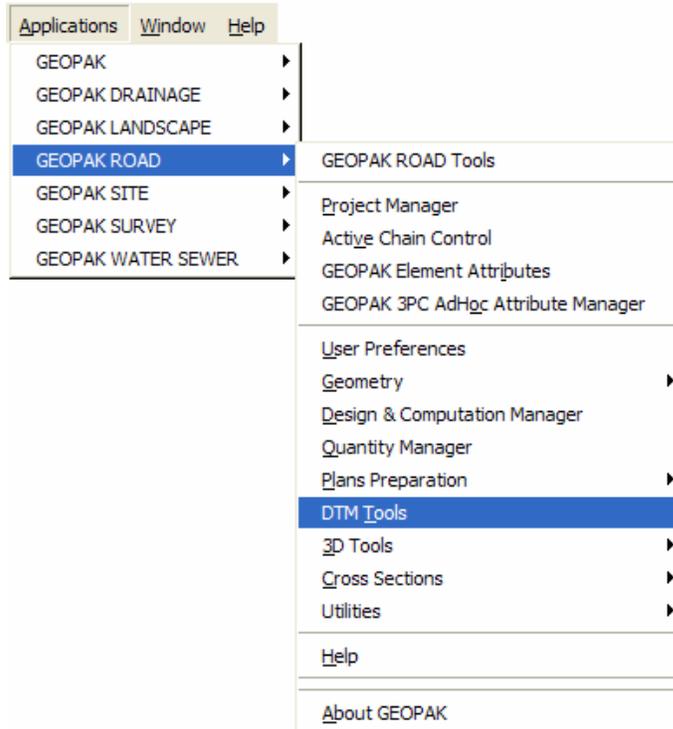


Figure 15-1: Accessing DTM Tools

or by clicking on the DTM icon in the GEOPAK toolbar.

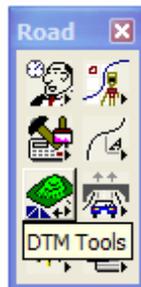


Figure 15-2: DTM Tools Icon

- This will bring up the following dialog box. Select the Extract Graphics button.*

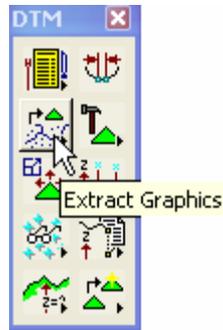


Figure 15-3: DTM Tools Dialog

4. The following dialog box will come up.

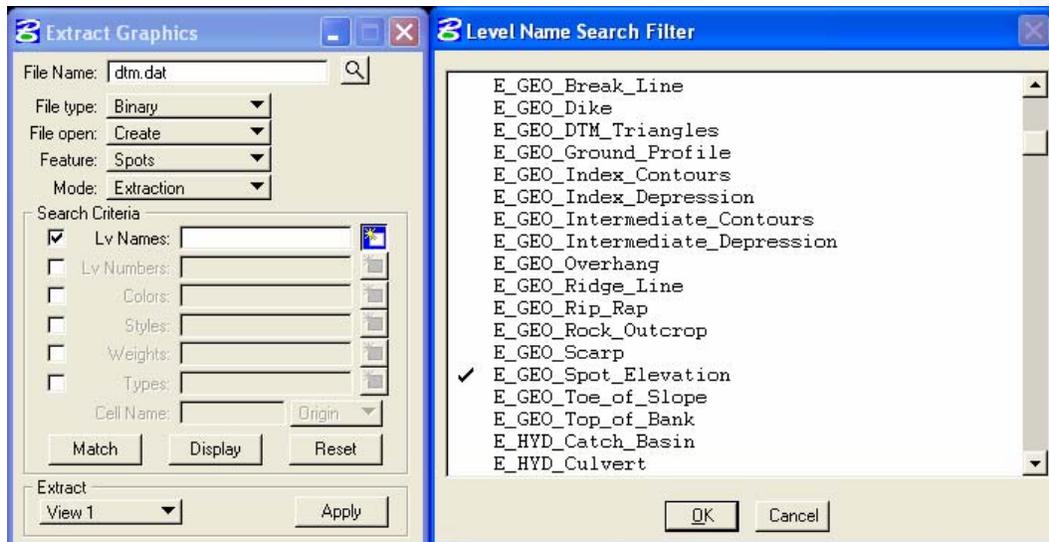


Figure 15-4: Extract Graphics

Fill in the file name for the .dat file, make sure the File open button is on Create unless adding information to an existing .dat file.

5. *EFLHD leveling convention allows for easy separation by level only so the Levels Numbers box should be the only one marked in the Search Criteria area. Pick the Select box by the Levels label to bring up a Microstation Level Name Search Filter dialog box. Since Spots is the Feature identified above in the Search Criteria area, make sure all spots are on level E_GEO_Spot_Elevation and then mark level E_GEO_Spot_Elevation only, then select OK.*
6. *Fit your Microstation view so all elements are included within the current view, make sure*



View is selected in the Extract portion of the Extract Graphics dialog box and pick Apply.

- Once that data is extracted change the Extract Graphics dialog box to show File Open = Append and Feature = Breaks as shown below.*

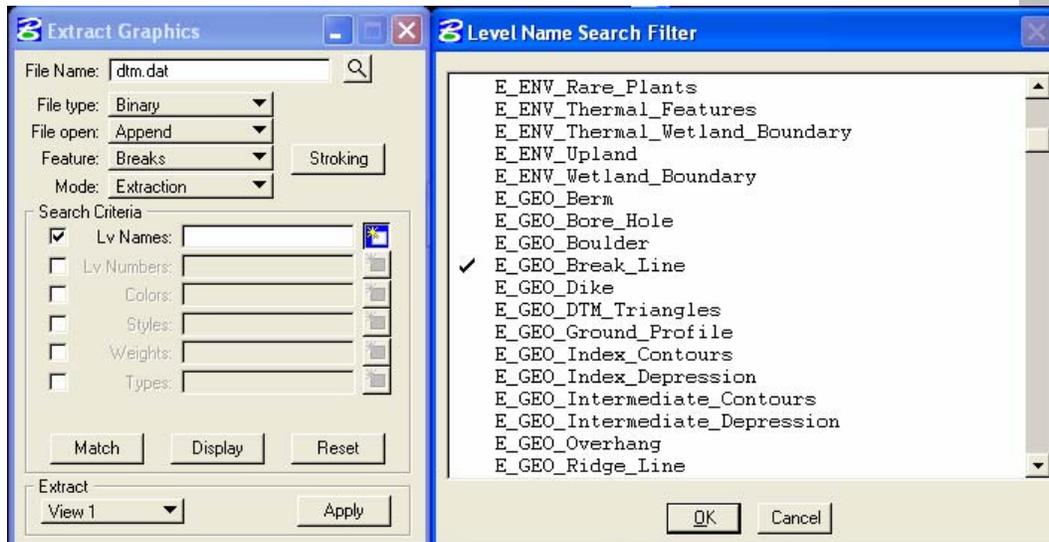


Figure 15-5: Append Settings

- Make sure all the break lines are on level E_GEO_Break Line and then change the Selection Level to level E_GEO_Break Line and select Apply.*
- Once the .dat file is completed, pick the Build Triangles button.*

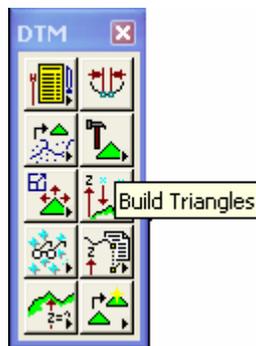


Figure 15-6: Build Triangles

This will bring up the following dialog box.

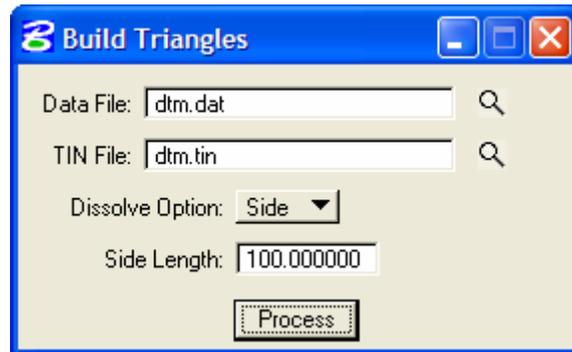


Figure 15-7: Build Triangles

10. *GEOPAK will automatically input the .dat file just created. Type in the .tin file name and change the Dissolve Option from None to Side.*
11. *Select process and GEOPAK will build the tin*



The side length refers to the length of a triangle leg placed on the exterior of the tin. We do not want the triangles jumping across areas on the exterior boundary of the survey where there is no survey data. Make sure this length is long enough to avoid any gaps in the middle of the tin, but short enough to keep the triangles from spanning areas where there is no survey.



Checking TIN

Once the tin is created, it is important to make sure no elements with zero elevations or no busts in the survey have been included in it. First, check the triangle statistics to verify that the elevation range is realistic. Then draw the contours to make sure they look reasonable. The following workflow will guide the user through these steps.

Workflow 2: Checking the .tin

1. *Select the DTM Menu button from the DTM toolbar.*



Figure 15-8: DTM Menu

This will bring up the following dialog box.

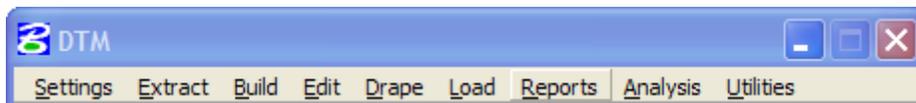


Figure 15-9: DTM Toolbar

2. *Select Reports>Triangle Statistics to access the TIN statistics dialog box shown below.*

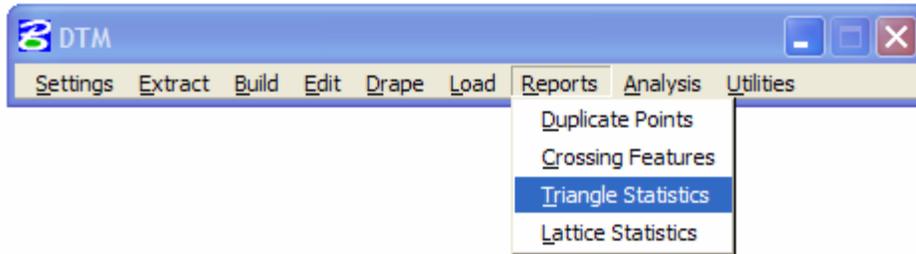


Figure 15-10: Accessing Triangle Statistics

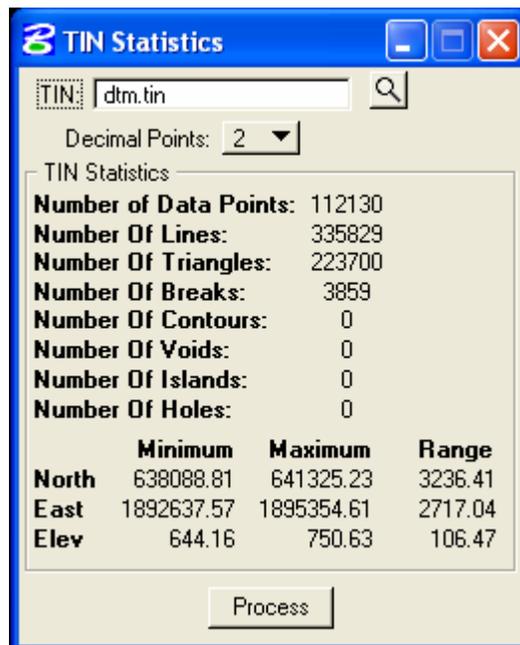


Figure 15-11: TIN Statistics

- 3. GEOPAK will automatically input the current .tin name. Press Process and GEOPAK will fill in the fields. Check the Elevation values to make sure they are consistent with the survey. If there is a zero value or the range does not seem correct, the best way to determine the location of the bust is to draw the contours as described below. Once the bust is located, the correction to the .dtm file can be made and the .dat file can be recreated.*
- 4. To check the .tin by drawing the contours, select the Load DTM Features button.*

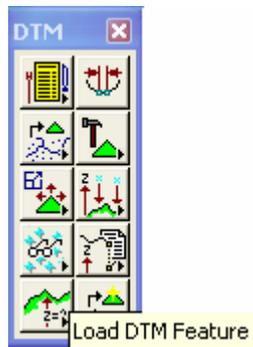


Figure 15-12: Load DTM Feature

The following dialog box will come up.

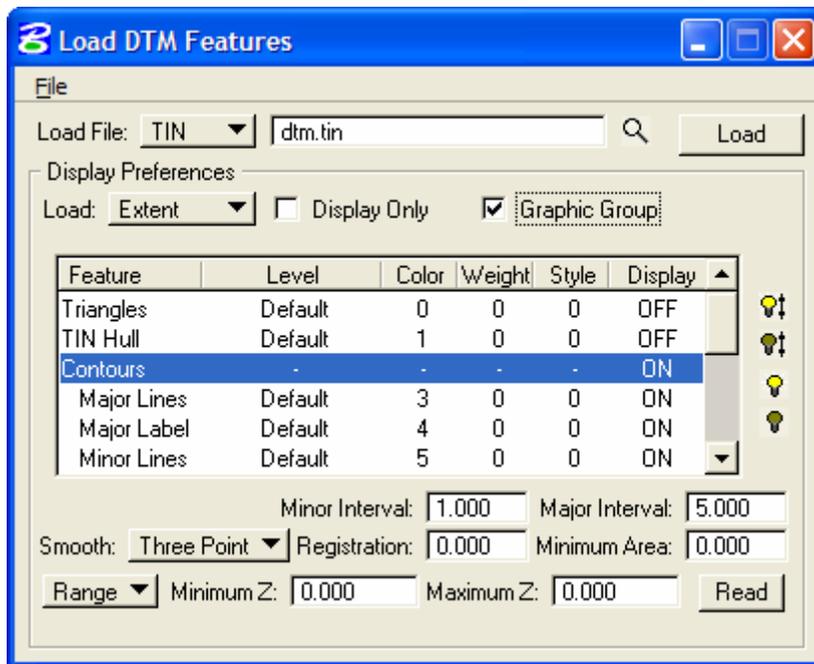


Figure 15-13: Load DTM Features

5. *GEOPAK will fill in the current .tin file. Choose Extent and either Display Only or Graphic Group.*



If Display Only is selected, the contours will disappear when the view is refreshed. Selecting Graphic Group will allow the user to easily delete the contours.



6. *Set the Display for Contours, Major Lines, Major Label, and Minor lines ON by highlighting each and picking the yellow light bulb without the arrows next to it. Set the parameters for the lines and labels. Set the Major and Minor Intervals as above and pick the Read button to set the range equal to the range of the tin. Once the parameters are defined select Load button at the top of the dialog box.*
7. *Review the contours to determine if there are any busts. Make any corrections necessary and start the process over with Workflow 1.*



These contours are not meant for plan production.
This process is strictly for checking the tin.