



## Table of Contents

### CHAPTER 7 ~ Color Tables

**Color Table .....** .....7-1

**WORKFLOW 1: Attaching EFLHD Color Table .....** .....7-1

*Figure 7-1: Setting Menu .....* .....7-1

*Figure 7-2: Default Color Table .....* .....7-2

*Figure 7-3: Open Color Table .....* .....7-2

*Figure 7-4: EFLHD Color Table .....* .....7-3

**WORKFLOW 2: Attaching the Color Table Permanently .....** .....7-4

*Figure 7-5: Workspace Menu .....* .....7-4

*Figure 7-6: User Configuration .....* .....7-4

*Figure 7-7: Alert Dialog Box .....* .....7-5



## Chapter 7 Color Table

### Color Table

The current color table in use at EFLHD for the X30 Generation of standard files is: **color1.tbl**. This file can be found on the EFLHD designers local computer at:

M:\Cadd\_resource\_v8\X\_30\Standards\Tables

### Workflow 1: Attaching EFLHD Color Table

1. *From MicroStation select Settings>Color Table...*

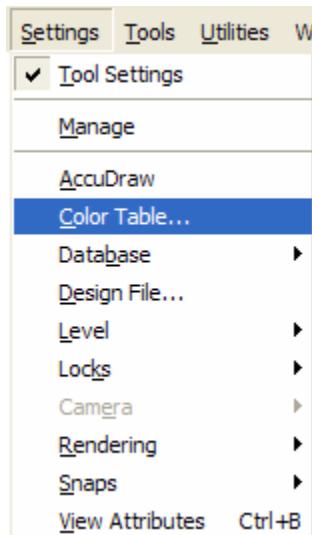


Figure 7-1: Settings Menu

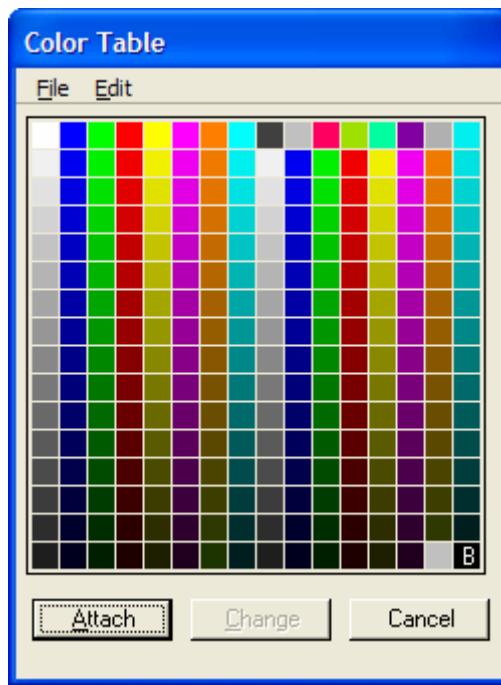


Figure 7-2: Default Color Table

2. This will open the current color table, usually the MicroStation default color table, shown in Figure 7-2. From the color table palette, select File>Open..., and then select the EFLHD color table to be attached.

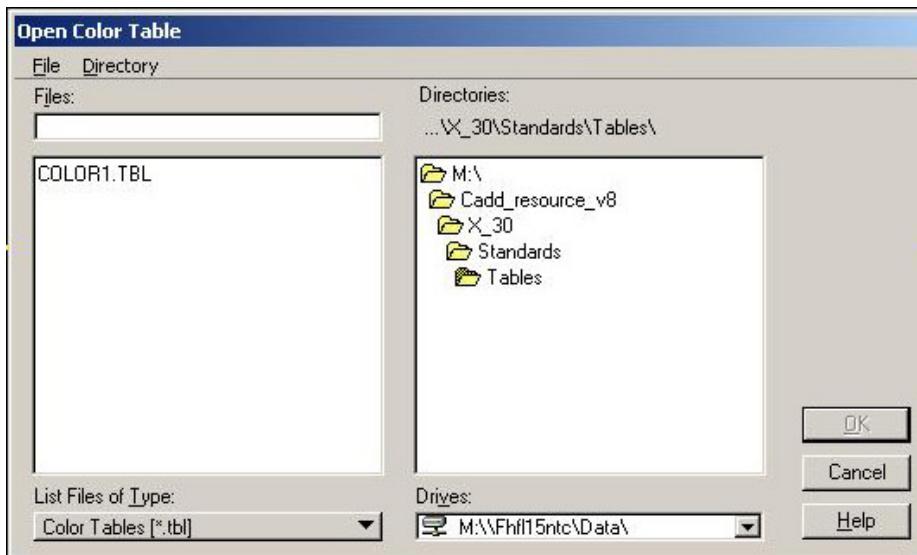


Figure 7-3: Open Color Table

3. Click OK and the EFLHD color table will now be shown.



Figure 7-4: EFLHD Color Table

4. From the workspace configuration dialog box, select colors.
5. When the correct color table, *color1.tbl*, is displayed, click on the attach button. The correct color table will now be attached to this drawing.



For EFLHD employees, color tables are automatically attached while opening a design file using the Project Configuration (\*.pcf). If the correct color table is not displaying, contact CADD support to have this setup.



## Workflow 2: Attaching the Color Table Permanently

1. To attach the correct color table more permanently, select *Workspace>Configuration...* from the main Microstation pulldown.

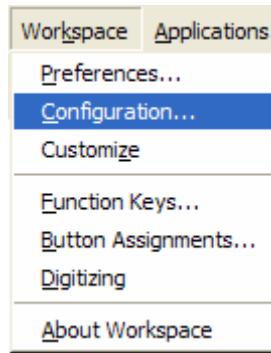


Figure 7-5: Workspace Menu

2. From the workspace configuration dialog box, select colors.

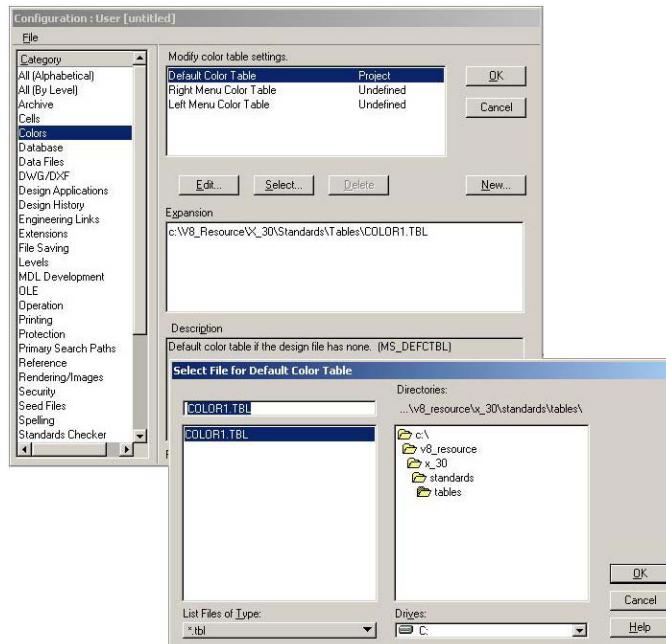


Figure 7-6: User Configuration



3. *Highlight Default Color Table from the upper right window on the palette. Click on the select button and select the correct color table, color1.tbl. Once selected, click the OK button. This will prompt an alert from Microstation, asking if you really want to save changes to your .ucf file (user configuration file).*

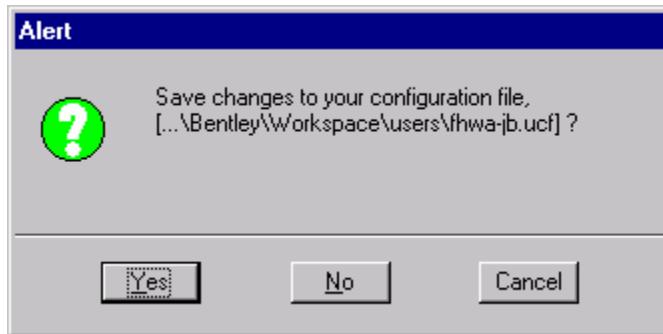


Figure 7-7: Alert Dialog Box

4. *Choose Yes and the color table will be attached each time Microstation is launched. For all configuration changes, exit Microstation and re-enter for the changes to take affect.*



Workflow 2 - Attaching the Color Table  
Permanently is for information only. EFLHD designers should not manually attach or edit configuration variables. For EFLHD, the CADD Coordinator sets the configuration variables.